

CasaTunes™ for Pronto™ Quick Start Guide

Installation

Controlling CasaTunes using your Pronto requires a special program, called a ProntoScript, to be loaded onto your Pronto. The CasaTunes ProntoScript for the Philips™ Pronto should be installed and set up by your dealer using the CasaTunes ProntoScript Modules and the installation technote found at www.CasaTunes.com/downloads.

Using the Pronto to control your CasaTunes Music Server

View by Room, Example1

Your dealer will have installed a button that takes you to the CasaTunes control pages in the Pronto. When this button is pressed you will be taken to the “View by Room” page, which shows you what is playing in the chosen room. The following photo shows the View by Room page for a TSU9600. The TSU9800 looks similar to the TSU9600. The TSU9400 has similar functions.



List of functions and how to access them:

Room Power: Touch power icon on screen OR power button.

Volume: Use Vol + and – buttons.

Mute: Use the mute button (speaker with X).

Change Source of music: Use CH + and – buttons OR touch the up and down arrows on screen on either side of the Source.

Stop, Pause, Next and Previous: Touch the white controls on the screen above “All On”.

Continuous and Shuffle: Touch the green or red arrows above “All Off” to change these modes. Green means they are on, red means they are off.

Change position in song: Touch the progress bar on the screen at the position you wish to go to.

Power all rooms on/off: Touch “All On” or “All Off” OR the firm buttons below them.

Control another room: Use the PAGE + or – buttons to change the room that you are controlling.

Go to “All Rooms” page (to see all the rooms in the house): Touch “All Rooms” or the firm button below it.

Go to “Select Music” page: Touch “Select Music” or the firm button below it.

View the list of music playing in the current source (available only when playing Windows Media, iTunes or iPod music): Touch “Queue” or the firm button below it.

View by Room, Example2

The following photo shows the TSU9400 on the View by Room page with a tuner connected to an external input.

Change source, power, volume, All On, All Off, go to Select Music, go to All Rooms, mute: same as previous example.



Tune up/down, Seek up/down, Scan: Touch the appropriate locations on the screen. If selections are gray, they are not available for your tuner.

Select Station: Touch “Select Station” or the firm button below it. This will take you to a selection page for selecting stations.

Direct Tune: You can put in the frequency and band (AM, FM, etc) directly by touching the frequency display OR “Direct Tune” OR the firm button below “Direct Tune”. Any of these will take you to a special Direct Tune Keyboard:

On the Direct Tune Keyboard you can click on a band, such as FM, and hit enter to change bands. Or, you can click on a band, type in a frequency or channel, followed by the enter firm button and go to a specific station. What you see on this keyboard varies depending on which tuner you are using.



View all Rooms

When you are in the “Rooms” page, you see all the rooms in your home. The following photo shows the TSU9600 in the “Rooms” page. Following the image is a list of control functions for this page.



Select a room to control: By rotating the wheel you can scroll up and down the list of rooms. Whichever room is highlighted is the room you will control. Use the PAGE + and – buttons to move up or down the list of rooms one page at a time.

Go to View By Room page: When a room is highlighted you can push the OK button in the middle of the wheel to go to the “View by Room” page for that room. You can also simply touch the bar for the room.

Change source for a room: When a room is highlighted you can use the CH + and – buttons to change sources for that room. You can also simply touch the up and down arrows on either side of the Source for any room. Touching these buttons will not take you to the View by Room page.

Power: Pushing the power button will change the power on or off for the highlighted room. You can also touch the power icon on the bar for the room that you want to turn on or off. Touching the power icon will not take you to the View by Room page.

All on or off: Touch the “All On” or “All Off” button to turn all rooms on or off. You can also use the firm buttons below the screen.

Go to Select Music: Touch “Select Music” to go to the Select Music page for the highlighted room. You can also push the firm button below it.

Change Volume/Mute: Push the VOL + or – button to change the volume for the highlighted room. Push the Mute button (speaker with an X on it) to mute the highlighted room. When changing volume a display comes up showing current volume level (No volume display in TSU9400 for this page, but control still works).

Select Music/Station

Following is a TSU9600 in the Select Music page for an internal CasaTunes Player source.



Volume, Mute and Power: You can adjust the volume, Mute and power for the room you are controlling while you are selecting music. Use the VOL + or -, mute and power buttons for control.

Pick the type of music you want to select: Use the wheel to scroll up and down the list and hit the OK button. The PAGE + and - buttons take you up and down a page at a time on longer lists of items. You can also simply touch the bar of the item you wish to select.

Go back to View by Room: Touch "Now Playing" or the firm button below it.

More functions/explanation: When you select a category, such as iTunes Music, you will go to another list that acts similarly to the list shown above. When you have music that you can pick, there will not be an arrow at the right end of the items bar. With iTunes, iPod or Windows Music, where it is possible to pick multiple items, you will see the image shown to the right on the TSU9400. Following describes the functions available.

Play (TSU9400 only): Shown only when there are multiple items that can be selected to Play. Click "Play" or the firm button below it to bring up the Play Now, Add to Queue and Add and Play buttons. The TSU9600/9800 always shows the Play Now, Add to Queue and Add and Play buttons on the edge of the screen when there are multiple items that can be played.

Play Now: Clicking "Play Now" will immediately remove any playing songs in the queue for the room you are controlling and any other rooms that are listening to the same source and replace them with



the songs you have selected with checkmarks.

Add to Queue: Clicking “Add to Queue” adds the songs selected with checkmarks to the current queue of songs playing in the room you are controlling and all other rooms listening to the same source. The songs that were already on the queue will continue to play first before the newly added songs.

Add and Play: Clicking “Add and Play” adds the songs selected with checkmarks to the current queue of songs playing in the room you are controlling and all other rooms listening to the same source and changes the currently playing song to the first of the songs added to the Queue.

Changing Selections: Click on the Checkmark next to any song that you don’t want to play. Click on “Tasks” or the firm button below it to bring up another menu which lets you select all the items or none of the items in the current category.

Scroll Faster: There are certain times when you have a long list of items, such as albums or artists, where you can use the built in fast scroll feature. This is only available for items that are listed in alphabetic order by CasaTunes. In particular, it will work for albums and artists in Windows Media, iTunes and iPod music. Click on the “Guide” button (the hard button that has an open book symbol on it). A sub menu will display with a letter in it. Now, when you turn the wheel it will go through the alphabet and the items displayed will be the ones that start with the letter displayed or higher.

Go to View by Room: Click on “Now Playing” to go to the View by Room page for the current room you are controlling. If you do this before touching any of the play buttons, all selections will be deselected.

Refresh Library (not always available): Touch “Refresh Library” or the firm button below it. After adding music to your Windows Media Player library, you will need to Refresh the CasaTunes library to see the new music. This can take a while with large libraries.

Additional notes: When you see items that have the select checkmark at one end and the arrow at the other end you can either play those items, using Play Now, Add to Queue or Play and Add OR click on the bar to see what items are contained in them. For example, if you are looking at albums, you can check the ones you want to play and click “Play Now” OR you can touch one of the albums to see the individual songs in the album and play them only. Use the “Previous Menu” to go back to the higher category.

View Queue (available only when playing Windows Media, iTunes or iPod music)

To see what is playing in a room, go to the Queue, as shown in the next image. The highlighted song is the song that is currently playing. Image on next page.

Change the currently playing song: Touch another song on the screen or scroll using the wheel and click on the OK button and the song selected will start playing. Use the PAGE + and – buttons to scroll up and down one page at a time.



View Queue - Tasks

Click on "Tasks" or the firm button below it and you open a task window as seen below.



Clear Queue: Touching the Clear Queue button clears all of the currently playing songs from the currently selected Source.

Reshuffle Queue: Touch the Reshuffle Queue button to shuffle the music in the queue.

Save Queue as Playlist (not available on the TSU9400): If you have created a queue of songs in a source that you might wish to use again, you can save it as a Playlist. After touching this button you will be taken to a keyboard where you can give the playlist a unique name. Later, you can select and play the playlist just like any other playlist.

Remove Song from Queue: If you wish to remove a song from the playing queue, use the wheel to scroll to the song, click on Tasks and then click on "Remove Song From Queue". This does not remove the song from your library or erase the song from your hard disk.