

CasaTunes FAQ

How to control CasaTunes using the Russound UNO-S2 Keypads

You can use your existing keypads to select music from your PC and control the play back of the selected music. Use the following keys to navigate the CasaTunes menus:

CasaTunes Menu Navigation	Keypad Button
Enter into the CasaTunes Menu mode	Press & Release Play Button
Select Menu Item	Press & Release Play Button
Move up a Menu	Press & Release Stop Button
Move to next menu item	Press & Release Next Track Button
Move to previous menu item	Press & Release Previous Track Button
Move to next menu item that begins with a different first letter	Press & Release '+' Button
Move to previous menu item that begins with a different first letter	Press & Release '-' Button

CasaTunes Playback Control	Keypad Button
Pause/Resume playing current song	Press & Release Pause Button
Skip to next song	Press & Release Next Track Button
Skip to previous song	Press & Release Previous Track Button
Stop music	Press & Release Stop Button

The following CasaTunes Menu selections are available from the keypads:

- CasaTunes Source Name (Main Menu)
- Clear Music Queue
- By Album
 - Album #1
 - [All Songs]
 - Track #1
 - ...
 - Track #N
 - ...
 - Album #N
- By Artist

- [All Albums]
 - Album #1
 - ...
 - Album #N
- By Genre
- [All Albums]
 - Album #1
 - ...
 - Album #N
- My Playlists
- Playlist #1
 - ...
 - Playlist #N
- My iPod (only available when iPod is docked)
- By Album
 - By Artist
 - By Genre
 - My Playlists
- Repeat Mode
- Off
 - On
- Shuffle Mode
- Off
 - On

All Albums, Artists, Genres and Playlists items are sorted alphabetically in ascending order.

If you would like to listen to a different selection of songs, you must first select 'Clear Music Queue', to remove the current songs from the playlist, and then add your new selections. When you add a new selection, the music will immediately start playing.

After a period of keypad inactivity, CasaTunes will exit the menu mode and display the track information for the current playing song.